



327411-0010

BOSE[®]
Better sound through research[®]

©2011 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM327411 Rev.03

BOSE[®]




BOSE[®] IE2 AUDIO HEADPHONES

Owner's Guide | Brugervejledning | Bedienungsanleitung
Guía de usuario | Notice d'utilisation | Manuale di istruzioni
Gebruiksaanwijzing | Bruksanvisningen
Podręcznik użytkownika | Felhasználói útmutató
Omistajan opas | คู่มือผู้ใช้ | 사용자 안내서 | 用戶指南
使用者指南 | オーナーズガイド | دليل المالك

Welcome

Thank you for purchasing the Bose® IE2 audio headphones. The Bose® IE2 audio headphones offer a combination of lifelike audio performance and comfortable fit not available from most conventional earbuds.

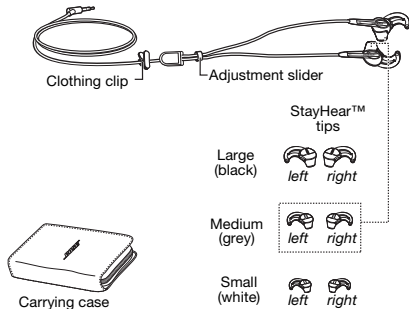

**Headphones come with medium StayHear™ tips attached*

Register your product

Now is a good time to register your headphones. You can do this easily by going to <http://global.Bose.com/register>.

Connecting to an audio device

You can connect the IE2 audio headphones to any device with a standard 3.5 mm stereo plug (headphone jack).



Importance of Proper Fit

When you wear the headphones properly, it provides the comfort and clarity you expect from Bose®.

Fitting the headphones to your ear


The headphone earpiece has a soft StayHear™ tip attached, allowing it to rest comfortably in the bowl of your ear. The wing part of the tip fits just under your ear ridge.

Note: Each tip is marked with either an L or an R to indicate which earpiece it is for. Be sure to attach the left StayHear™ tip to the left earpiece and the right StayHear™ tip to the right earpiece.



To determine if the tip is the right size:

1. Insert the earpiece into the canal just enough for the headphone to rest lightly against your ear.
2. Tilt the headphone back and press the tip wing under the ear ridge until it is secure. The tips should fit comfortably yet securely in the bowl of the ear.

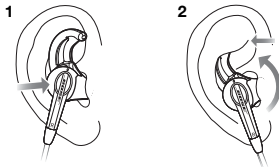

Changing ear tips

Select the type and size of eartip that provides you with the best comfort and fit.

1. Gently peel the edges of the attached tip away from the earpiece, using care not to tear the tip.

CAUTION: To prevent damage, do not pull on the StayHear™ tip wing.

2. Position the opening of the new tip over the nozzle and the small slot over the nozzle hook.

Note: Each tip is marked with either an L or an R to indicate which earpiece it is for. Be sure to attach the left StayHear™ tip to the left earpiece and the right StayHear™ tip to the right earpiece.

3. Ease the base of the tip down around the base of the earpiece until the tip feels secured.



StayHear™ tips



Adjusting for comfort and stability

There are several ways you can adjust your headphones to provide additional comfort and stability. Using the adjustment slider and clothing clip you can customize how you wear your headphones.

Using the adjustment slider

Move the adjustment slider up or down to reduce or increase the amount of loose cord between the left and right earpiece.



Using the clothing clip

Use the clothing clip to fasten the cable to your clothing, for convenience, stability, and to help manage the cable. This can be helpful during high-movement activities or when using the headphones in a single earpiece configuration.



Cleaning

Your headphones may require periodic cleaning:

- Ear tips: First, remove them from the headphones and wash the tips with a mild detergent and water. Make sure you thoroughly rinse and dry them before putting them back on the headphones.
- Headphone nozzles: Clean only with a dry, soft cotton swab or equivalent. Never insert any cleaning tool into the nozzle.

Troubleshooting

If you experience any trouble using your headphones, try the following troubleshooting instructions. If you still need help, see the contact information on the inside back cover for assistance in your area.

Problem	What to do
No audio/ intermittent	<ul style="list-style-type: none">• Make sure that the headphone plug is securely connected to the headphone/headset jack (not the line out jack).• Try another audio device.
Excessive bass	<ul style="list-style-type: none">• Turn off any audio enhancement features on the audio source.
Low volume/ poor audio	<ul style="list-style-type: none">• Turn off any "sound checker" or other audio signal altering features on the audio source.• Make sure ear tips and headphone nozzles are clear of any debris or wax build-up.• Make sure the volume level of the audio source is turned up.
Ear tips falling off	<ul style="list-style-type: none">• Make sure the ear tips are securely attached to the earpiece and nozzle hook.
Lost ear tip	<ul style="list-style-type: none">• Visit owners.bose.com for replacement tips.
Sound is muffled from earpiece	<ul style="list-style-type: none">• Make sure ear tips and headphone nozzles are clear of any debris or wax build-up.• Unplug the headphones from the audio source, then plug back in making sure they are securely connected.• Try another audio device.
Sound is only coming from one earpiece	<ul style="list-style-type: none">• Unplug the headphones from the audio source, then plug back in making sure they are securely connected.• Try another audio device.

WARNINGS:

- Contains small parts which may be a choking hazard. *Not suitable for children under age 3.*
- This product contains magnetic material.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid high volume levels when using headphones, especially for extended periods.
- Use caution when using your headset/headphones while operating a vehicle or engaging in any activity that requires your full attention. Check and follow local laws regarding headset/headphones use. Some jurisdictions impose specific limitations, such as single earpiece configuration, on the use of such products while driving.



CAUTIONS:

- Sounds that you rely on as reminders or warnings may have an unfamiliar character when using headphones. Be aware of how these sounds may vary in character so you can recognize them as needed.
- Do not drop, sit on, or allow the headphones to be immersed in water.

Limited Warranty

Your Bose® IE2 audio headphones are covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

What you must do to obtain Limited Warranty service

Return the product, with proof of purchase from an authorized Bose dealer, using the following procedures:

1. Contact the Bose organization in your country/region (visit Global.Bose.com for contact information in your country/region) for specific return and shipping instructions.
2. Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country.
3. Place any necessary Return Authorization Number prominently on the outside of the carton. Cartons not bearing a Return Authorization Number, where required, will be refused.

安全上の留意項目

ご使用前に、下記の「留意項目」をよくお読みになり、正しくお使いください。

この「安全上の留意項目」は、製品を安全に正しくお使いいただき、あなたや他の人々への危害や財産への損害を未然に防止するため、いろいろな絵表示をしています。内容をよく理解してから本文をお読みください。

絵表示について



警告

この表示を無視して、誤った取り扱いをすると、人が死亡または重傷を負う可能性が想定される内容を示します。



注意

この表示を無視して、誤った取り扱いをすると、人が損傷を負う可能性が想定される内容および物的損害のみの発生が想定される内容を示します。



△記号は警告・注意を促す内容があることを告げるものです。



⊘記号は禁止の行為であることを告げるものです（左図の場合は分解禁止を意味します）。



●記号は行為を強制したり指示する内容を告げるものです。

警告



必ず実行

小さな部品は幼児の手の届かないところに置く
誤飲や窒息などの危険がありますので、小さなお子様の手の届かないところに保管してください。

乗り物の運転中は使用しない



必ず実行

自転車、オートバイ、自動車などの運転中は、絶対にヘッドホンを使用しないでください。交通事故の原因となります。片方の耳だけのヘッドホン使用も推奨しておらず、一部の地域では法律により禁止されています。

警告



禁止

大音量で長時間続けて聞かない
大きな音量で長時間続けて聞くと、聴力に悪い影響を与えることがあります。特にヘッドホンのご使用時にはご注意ください。



使用禁止

危険な場所では使用しない
歩行中であっても、駅のホームや車道、工事現場など、周囲の音が聞こえないと危険である場所での使用はお止めください。事故の原因となります。



磁気材料使用

本機には磁気材料が含まれてます

⚠ 注意



装身具の
併用禁止

装身具と併用しない

イヤリング、ピアスなどの耳に付ける装身具とヘッドホンを併用すると、けがの原因となることがあります。また、ヘッドホンの性能が損なわれたり、ヘッドホンを傷付けたりすることがあります。



聞こえ方の
変化に注意

音の聞こえ方の変化に注意する

ヘッドホンを使用した時、確認や注意喚起のための音声が普段と異なった感じで聞こえることがあります。必要な時に認識できるように、どのような変わり方をするかをご確認ください。



使用禁止

お肌に異常が生じた場合は使用しない

万一ご使用によってお肌にかぶれなどの異常が生じた場合は、直ちにヘッドホンの使用を止め医師にご相談ください。

⚠ 注意



禁止

ほこり、油煙、湯気、湿気、高温の場所に置かない

ほこり、油煙、湿気が多い場所や、直射日光の当たる場所、直接ライトが当たる場所、高温になる車の中などには置かないでください。故障の原因となります。



音を小さく

電源を入れる前には音量を最小にする

突然大きな音が出て、聴力障害などの原因となることがあります。




使用禁止

**落としたり、ぶつけたり、上に物を乗せたり、
水に浸したりしない**

故障の原因となります。

はじめに

Bose® IE2 オーディオヘッドホンのお買い上げありがとうございます。Bose® IE2 オーディオヘッドホンは、ほとんどの従来のイヤホンでは不可能だった臨場感あふれる音質と快適な装着感を同時に実現した製品です。

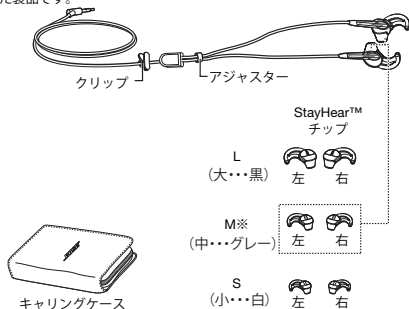

※ヘッドホンには出荷時にMサイズの StayHear™ チップが装着されています。

※説明の便宜上、イラストは実物と異なる場合があります。

オーディオ機器への接続

IE2 オーディオヘッドホンは、標準的な 3.5 mm ステレオミニジャックが搭載された機器に接続できます。



正しい装着の重要性

Bose® 製品の快適な装着感と優れた音質をお楽しみいただくために、ヘッドホンを正しく装着してください。

ヘッドホンの耳への装着


ヘッドホンのイヤーピースには、耳の窪みに快適に装着できるように設計された StayHear™ イヤーチップが取り付けられています。このイヤーチップのウィング部分が耳の溝にフィットします。

注意：イヤーチップには、左右どちらのイヤーピースに取り付けるかを示す L、R のマークが付いています。左耳用の StayHear™ チップをイヤーピースの L 側に、右耳用の StayHear™ チップを R 側にそれぞれ正しく取り付けてください。



適切なサイズのイヤーチップを選択するには：

1. ヘッドホンが落ちない程度に、イヤーピースを軽く耳に挿し込みます。
2. ヘッドホンを後頭部側に倒して、イヤーチップのウィング部分を耳の溝におさめます。
イヤーチップが耳の窪みにしっかりとおさまり、不快感がないか確認してください。

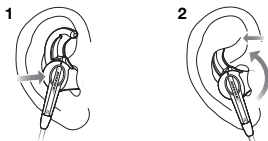

イヤークリップの交換

自分の耳にフィットするように3種類のサイズのイヤークリップからお選びください。

1. ウイングの付いている側からはがすように持ち上げて、破かないように注意してイヤークリップを外します。

注意: ウイング部分を引っ張って、StayHear™ チップを破損しないようにしてください。


2. イヤークリップのノズルにイヤークリップをかぶせるように差し込みます。奥まで差し込み、ノズル根元の返しの部分にイヤークリップをはめめます。

注意: チップには、左右どちらのイヤークリップに取り付けるかを示す L、R のマークが付いています。左耳用の StayHear™ チップをイヤークリップの L 側に、右耳用の StayHear™ チップを R 側にそれぞれ正しく取り付けてください。



3. イヤークリップのベースにチップをはめ込み、正しく固定されたかどうか確認します。

StayHear™ チップ



アジャスターとクリップの使い方

アジャスターとクリップを使って、ご自分の使い方にあった装着方法が選べます。

アジャスターの使い方

アジャスターの位置を上下させて、左右のイヤークリップまでのケーブルの遊びやたるみを調節します。



クリップの使い方

クリップでケーブルを衣服などに固定することで、ケーブルが絡みついたりすることを抑えます。エクササイズなどの激しい運動を行うときや右側のイヤークリップだけを使用する場合のケーブルの固定に役立ちます。



お手入れについて

定期的にお手入れすることをおすすめします。

- イヤークリップについて：初めにイヤークリップをヘッドホンから注意深く外します。外したイヤークリップを水で薄めた中性洗剤で無理な力を入れずにやさしく洗ってください。ヘッドホンに取り付ける際には、十分に乾燥していることを確認してから取り付けてください。
- ヘッドホンのノズル、マイク、通話ボタン：乾燥した柔らかい布か、綿棒などで、決して力を入れずに汚れをふき取ってください。ノズルの穴やマイクの穴には決して物を差し込んだり入れたりしないでください。

故障かな？と思ったら

使用中に正常に動かなくなった場合は、下記の点をご確認ください。
下記以外で異常が認められた場合や、対処しても正常に動作しない場合は、サービスセンターまでお問い合わせください。

トラブル	対処方法
音が聞こえない／途切れる	<ul style="list-style-type: none"> •ヘッドホンのプラグがヘッドホン／ヘッドセットジャックにしっかり接続されていることを確認してください(ラインアウトジャックではありません)。 •別の音楽再生機器で試してみてください。
低音が大きすぎる	<ul style="list-style-type: none"> •音楽再生機器の音質調整を元に戻すか、イコライザーなどの設定をオフにしてください。
音が小さすぎる／音質が悪い	<ul style="list-style-type: none"> •音楽再生機器の「音量制限」や、他の音量、音質調整機能をオフにしてください。 •イヤークリップやノズルの先端にごみなどが詰まっていることを確認してください。 •音楽再生機器のボリュームが上がっていることを確認してください。
イヤークリップが落ちる	<ul style="list-style-type: none"> •イヤークリップがイヤピースとノズルフックにしっかりと取り付けられていることを確認してください。
イヤークリップがなくなった	<ul style="list-style-type: none"> •イヤークリップは別売となります。入手の方法はユーザーサポートセンターまでお問い合わせください。
イヤピースからの音のはっきり聞こえない	<ul style="list-style-type: none"> •イヤークリップやノズルの先端にごみなどが詰まっていることを確認してください。 •音楽再生機器からヘッドホンを外し、しっかりと接続しなおしてください。 •別の音楽再生機器で試してみてください。
音が片方のイヤピースからしか聞こえない	<ul style="list-style-type: none"> •音楽再生機器からヘッドホンを外し、しっかりと接続しなおしてください。 •別の音楽再生機器で試してみてください。

故障および修理のお問い合わせ先

ボーズ株式会社 サービスセンター
お客様専用ナビダイヤル ☎ 0570-080-023
PHS、IP電話からは、Tel 03-5489-1124へおかけください。

〒206-0035 東京都多摩市唐木田1-53-9
唐木田センタービル

製品等のお問い合わせ先

ボーズ株式会社 ユーザーサポートセンター
お客様専用ナビダイヤル ☎ 0570-080-021
PHS、IP電話からは、Tel 03-5489-0955へおかけください。

保証

保証の内容および条件は付属の保証書をご覧ください。

保証書にシリアルナンバーを記入する際、ヘッドセットL(左)側のイヤークリップを外し、ノズルに印字されている4桁の番号を記入してください。

BOSE CORPORATION

USA

The Mountain,
Framingham, MA, 01701
888-757-9943
owners.Bose.com

Canada

9133 Leslie Street,
Suite 120, L4B 4N1
800-905-2177
www.Bose.ca

Australia

Unit 3/2 Holker St. Newington
NSW, 2127
1 800 061 046
www.Bose.com.au

Belgique/Belgie

B-3700 Tongeren
012-390-800
www.Bosebelgium.be

China

2203-2305 22F, West Gate
Tower/1038 West Nanjing
Road-MeiLongzhen Plaza,
Shanghai, 200041
86-400-880-2266
www.Bose.cn

Denmark

2605 Brøndby
4343-7777
www.Bose.dk

Deutschland

D-61381 Friedrichsdorf
0 6172-71040
www.Bose.de

France

78100 Saint Germain en Laye
01-30-61-67-39
www.Bosefrance.fr

India

Shriram Bhartiya Kala Kendra,
1 Copernicus Marg, New Delhi,
100-001
1-800-11-2673
www.Boseindia.com

Ireland

Castlebury Road,
Carrickmacross, Co
Monaghan
42-967-1500
www.Bose.ie

Italia

Via della Magliana 876
Roma, 00148
800-832-277
www.Bose.it

Japan

Bose K.K.
Shibuya YT Building
28-3 Maruyama-cho
Shibuya-ku, Tokyo 150-0044
TEL: 0570-080-021
FAX: 03-5489-1041
www.Bose.co.jp

Mexico

Paseo de las Palmas # 405,
11000
001-866-693-2673
www.Bose.com.mx

Nederland

1135 GE Edam
0299-390290
www.Bose.nl

New Zealand

0800 501 511
www.Bose.co.nz

Norge

N-2213 Kongsvinger
62-82-15-60
www.Bose.no

Österreich

Wienerbergstrasse 7 (10.OG)
01-60404340
www.Bose.at

Schweiz

Hauptstrasse 134
061-975-7733
www.Bose.ch

Sverige

S-43153 Mölndal
031-878850
www.Bose.se

United Kingdom

1 Ambley Green,
Gillingham Business Park,
Gillingham, Kent, ME8 ONJ
0844-2092630
Info_uk@Bose.com

Hong Kong

Suite 1203, Midas Plaza, 1 Tai
Yau Street, San Po Kong,
Kowloon, Hong Kong
852-2123-9000
support_hk@Bose.com

Finland

Kornetintie 6b Helsinki, 380
010-778-6900
www.Bose.fi

Poland

ul. Woloska 12
Warszawa, 02-675
+48 (0)22-8522928
www.Bose.pl

World Wide Web

www.Bose.com
www.Boseeurope.com